
WATER SOURCE HEAT PUMP

CONTROL SEQUENCE


- (1) OCCUPIED/UNOCCUPIED CONTROL SHALL BE DETERMINED BY THE EMS. WHEN IN THE OCCUPIED MODE, THE SUPPLY FAN SHALL RUN CONTINUOUSLY. WHEN IN THE UNOCCUPIED MODE, THE SUPPLY FAN SHALL RUN DE-ACTIVATED.
- (2) ON A DROP IN SPACE TEMPERATURE BELOW THE HEATING SET POINT OF TEMPERATURE/ RELATIVE HIMIDITY SENSOR, TH, THE HEATING CYCLE SHALL BE ENERGIZED AFTER SLOW CLOSING/OPENING TWO-WAY ATC VALVE OPENS.
- (3) ON A RISE IN SPACE TEMPERATURE ABOVE THE COOLING SET POINT OF TH, THE COOLING CYCLE SHALL BE ENERGIZED AFTER SLOW CLOSING/OPENING TWO-WAY ATC VALVE OPENS.
- (4) ON A RISE IN SPACE RELATIVE HUMIDITY, AS SENSED BY TH, THE DEHUMIDIFICATION CYCLE (WITH REFRIGERANT REHEAT) SHALL BE ENERGIZED. CONTROL SETPOINT SHALL
- (5) DUCT SMOKE DETECTOR, DD, SHALL STOP THE FAN AND CLOSE OUTSIDE AIR DAMPER, D, UPON SENSING IMPROPER CONDITIONS.
- (6) IF AIR FLOW SENSOR, AF, SENSES NO FLOW FROM SUPPLY FAN, AN ALARM SHALL BE REGISTERED AT THE EMS.
- (7) DURING MORNING WARM-UP, THE SUPLY FAN SHALL BE ENERGIZED, THE OUTSIDE AIR DAMPER, D, SHALL BE CLOSED, THE TWO-WAY ATC VALVE SHALL OPEN AND THE HEATING CYCLE SHALL BE ENERGIZED.

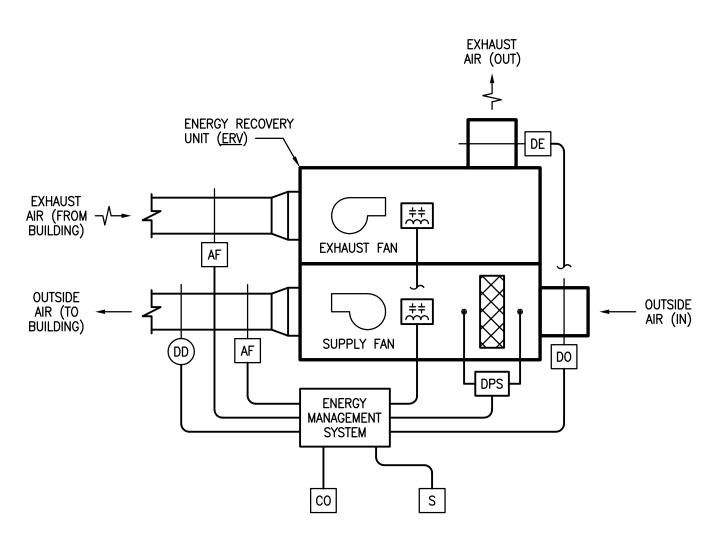

ENERGY RECOVERY UNIT CONTROL (ERV-1)

- (1) OCCUPIED/UNOCCUPIED MODE SHALL BE DETERMINED BY A WALL MOUNTED, PUSH-BUTTON SWITCH (S). SWITCH SHALL BE PROVIDED WITH A TIME DELAY AND SEND THE ERV INTO OCCUPIED MODE FOR A MIN. 2 HOUR INTERVAL. AFTER 2 HOURS, ERV SHALL AUTOMATICALLY DE-ENERGIZE INTO UNOCCUPIED MODE.
- (2) <u>WHEN IN THE OCCUPIED MODE</u>: UNIT SUPPLY AND EXHAUST FANS SHALL RUN CONTINUOUSLY. OUTSIDE AIR DAMPER, DO. AND EXHAUST AIR DAMPER, DE, SHALL BE OPEN. THE UNIT SHALL OPERATE ON ITS BUILT-IN CONTROLS FOR HEAT TRANSFER BETWEEN THE EXHAUST AIR AND SUPPLY AIR STREAMS.
- (3) WHEN IN THE UNOCCUPIED MODE: UNIT SUPPLY AND EXHAUST FANS SHALL BE OFF. OUTSIDE AIR DAMPER, DO, AND EXHAUST AIR DAMPER, DE, SHALL BE CLOSED.
- (4) **DUCT SMOKE DETECTOR**: DUCT SMOKE DETECTOR (FURNISHED BY DIVISION 16, INSTALLED BY DIVISION 15), DD, LOCATED IN THE OUTSIDE AIR DISCHARGE DUCT, SHALL SEND A SIGNAL TO THE FIRE ALARM SYSTEM UPON SENSING IMPROPER CONDITIONS. THE FIRE ALARM SYSTEM SHALL SEND A SIGNAL TO THE EMS TO TURN OFF THE SUPPLY FAN, TURN OFF THE EXHAUST FAN AND CLOSE THE DAMPERS (DO & DE).
- IF DUCT-MOUNTED AIR FLOW SENSOR, AF, SENSES NO FLOW FROM ITS ASSOCIATED SUPPLY FAN, AN ALARM SHALL BE REGISTERED AT THE EMS.
- ERV SHALL BE INTERLOCKED WITH CARBON MONOXIDE (CO) SENSOR. IF UNSAFE OSHA LEVELS OF CO ARE SENSED, ERV SHALL BE ENERGIZED UNTIL SAFE LEVEL IS ACHIEVED.


FROM WELL FIELD

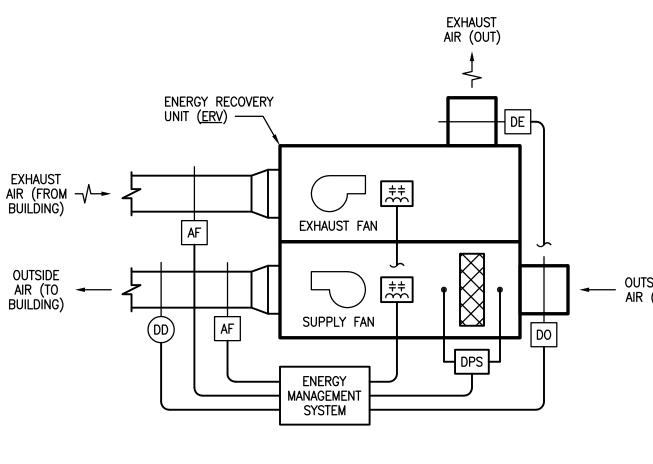


ENERGY RECOVERY UNIT CONTROL (ERV-2)

- (1) OCCUPIED/UNOCCUPIED MODE SHALL BE DETERMINED BY THE ENERGY MANAGEMÉNT SYSTEM, EMS.
- (2) WHEN IN THE OCCUPIED MODE: UNIT SUPPLY AND EXHAUST FANS SHALL RUN CONTINUOUSLY. OUTSIDE AIR DAMPER, DO, AND EXHAUST AIR DAMPER, DE, SHALL BE OPEN. THE UNIT SHALL OPERATE ON ITS BUILT-IN CONTROLS FOR HEAT TRANSFER BETWEEN THE EXHAUST AIR AND SUPPLY AIR STREAMS.
- (3) WHEN IN THE UNOCCUPIED MODE: UNIT SUPPLY AND EXHAUST FANS SHALL BE OFF. OUTSIDE AIR DAMPER, DO, AND EXHAUST AIR DAMPER, DE, SHALL BE CLOSED.
- (4) <u>DUCT SMOKE DETECTOR</u>: DUCT SMOKE DETECTOR (FURNISHED BY DIVISION 16, INSTALLED BY DIVISION 15), DD, LOCATED IN THE OUTSIDE AIR DISCHARGE DUCT, SHALL SEND A SIGNAL TO THE FIRE ALARM SYSTEM UPON SENSING IMPROPER CONDITIONS. THE FIRE ALARM SYSTEM SHALL SEND A SIGNAL TO THE EMS TO TURN OFF THE SUPPLY FAN, TURN OFF THE EXHAUST FAN AND CLOSE THE DAMPERS (DO & DE).
- (5) **FLOW SENSORS**: IF DUCT-MOUNTED AIR FLOW SENSOR, AF, SENSES NO FLOW FROM ITS ASSOCIATED SUPPLY FAN, AN ALARM SHALL BE REGISTERED AT THE EMS.

TO SYSTEM

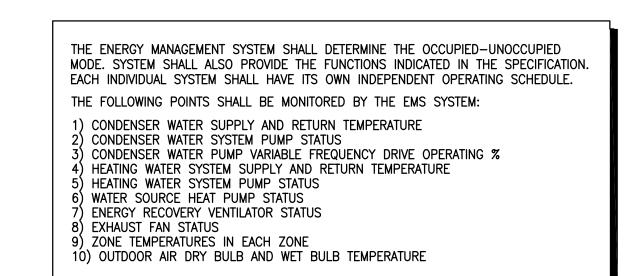


ENERGY MANAGEMENT SYSTEM

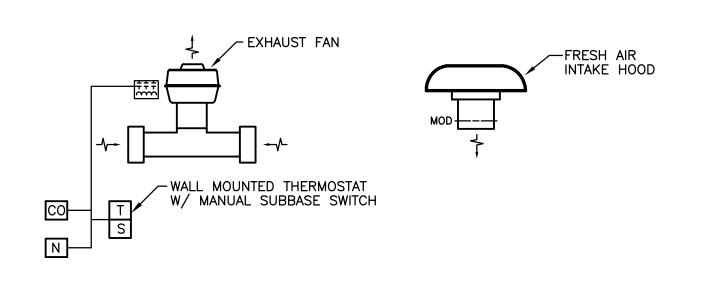

EXHAUST FAN CONTROL - APPARATUS BAYS (EF-1)

- 1. WHEN THE SPACE TEMPERATURE, AS SENSED BY THERMOSTAT, T, RISES ABOVE THE ADJUSTABLE SETPOINT, (78°F, ADJ.) INTAKE AIR MOTOR OPERATED DAMPER SHALL OPEN, THE FAN SHALL RUN AFTER ALL END SWITCHES HAVE PROVEN OPEN.
- 2. WHEN THE MANUAL SUBBASE SWITCH, S, IS SET TO THE ON POSITION, INTAKE AIR MOTOR OPERATED DAMPER SHALL OPEN, THE FAN SHALL RUN AFTER ALL END SWITCHES HAVE
- 3. EXHAUST FAN SHALL BE INTERLOCKED WITH THE CO AND N (NITROGEN) SENSORS, THERMOSTATS (W/MANUAL SUB-BASESWITCH) AND MOTOR OPERATED DAMPER ON INTAKE HOOD. CO & N SENSORS SHALL OVERRIDE THERMOSTAT & SWITCH UPON SENSING UNSAFE OSHA RECOMMENDED CONDITIONS.

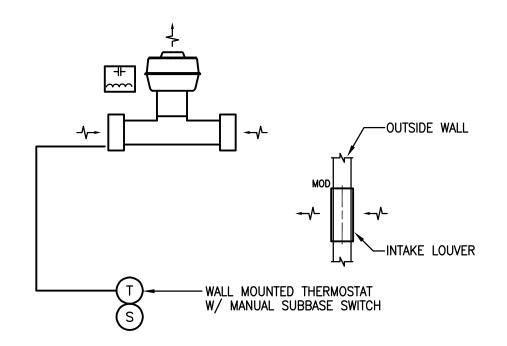

EXHAUST FAN CONTROL (EF-2)


- 1. MANUAL SUBBASE SWITCH SHALL BE "ON-OFF-AUTO"
- 2. WHEN SET TO THE "ON" POSITION, INTAKE AIR MOTOR OPERATED DAMPER SHALL OPEN AND FAN SHALL ENERGIZE.
- 3. WHEN SET TO THE "OFF" POSITION, INTAKE AIR MOTOR OPERATED DAMPER SHALL CLOSE
- AND FAN SHALL DE-ENERGIZE. 4. WHEN SET TO THE "AUTO" POSITION, FAN SHALL BE CONTROLLED TO OPERATE BY SET POINT TEMPERATURE AS DESCRIBED BELOW: UPON A RISE IN THE SPACE TEMPERATURE ABOVE SETPOINT OF 78°F (ADJ.) AS SENSED

BY WALL MOUNTED THERMOSTAT, T. INTAKE AIR MOTOR OPERATED DAMPER SHALL

OPEN AND FAN SHALL ENERGIZE. UPON SATISFYING TEMPERATURE SETPOINT, FAN SHALL

EF-2 AND CUH-1 SHARE THE SAME WALL MOUNTED SPACE THERMOSTAT, T

DE-ENERGIZE AND INTAKE AIR MOTOR OPERATED DAMPER SHALL CLOSE.

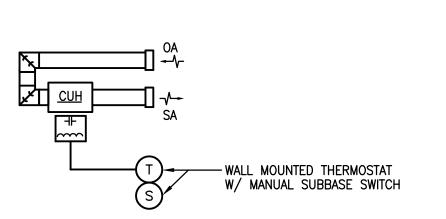

CABINET UNIT HEATER CONTROL (CUH-1)


UPON A DROP IN SPACE TEMPERATURE BELOW THE SETPOINT OF THERMOSTAT, T, (65° ADJUSTABLE) UNIT HEATER SHALL ENERGIZE. UNIT HEATER SHALL NOT BE LINKED TO SUBBASE SWITCH, S, AND SHALL OPERATE FOR ALL SETTINGS OF SWITCH.

<u>EF-2</u> AND <u>CUH-1</u> SHARE THE SAME WALL MOUNTED SPACE THERMOSTAT, T.

UNIT HEATER

ELECTRIC UNIT HEATER CONTROL

ALL ELECTRIC HEATERS ARE TO BE PROVIDED WITH INTEGRAL THERMOSTATS. UPON A DROP IN SPACE TEMPERATURE BELOW THE SET POINT OF THERMOSTAT, T, (65°F, ADJUSTABLE) UNIT HEATER SHALL ENERGIZE.

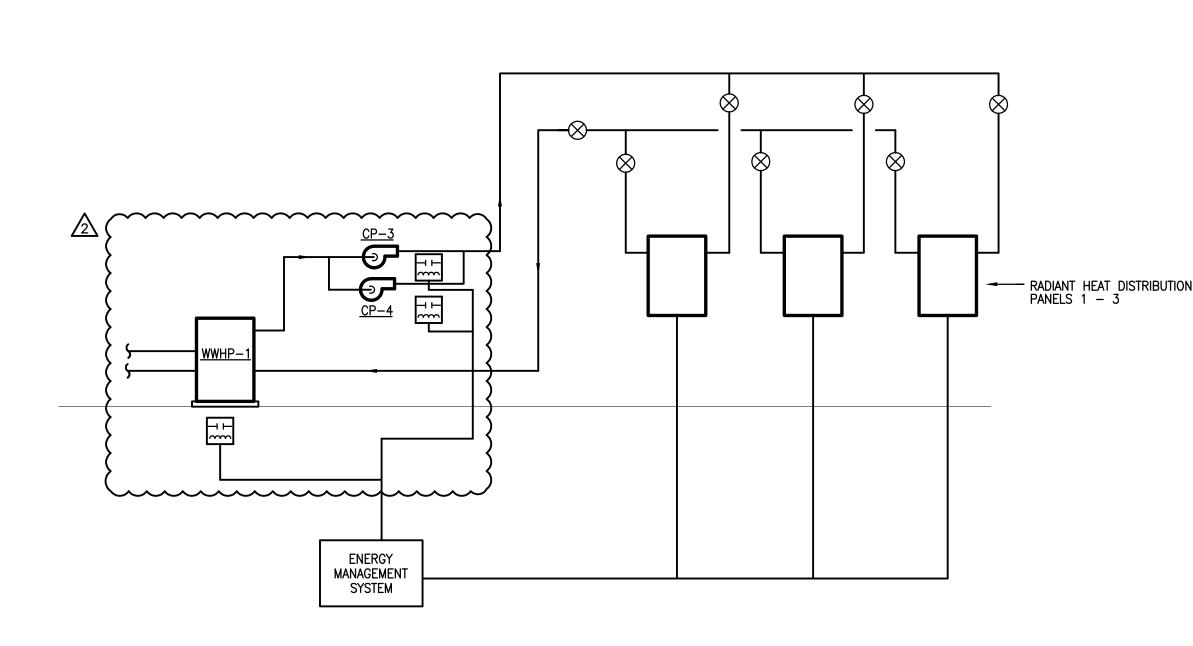

RADIANT FLOORHEATING CONTROLS

OCCUPIED-UNOCCUPIED CONTROL SHALL BE DETERMINED BY THE EMS. INITIALLY, THE SYSTEM SHALL BE IN THE OCCUPIED MODE 365 DAYS PER YEAR, 24 HOURS PER DAY. UPON A CALL FOR HEATING FROM ONE OF THE RADIANT FLOOR HEATING ZONES:

(1) THE ASSOCIATED CIRCULATING PUMP (CP-3 OR CP-4) SHALL BE ENERGIZED. IF THE LEÁD PUMPS FAILS TO OPERATE, AS SENSÈD BY DIFFERENTIAL PRESSURE SENSOR, THE LAG PUMP SHALL BE ENERGIZED. THE LEAD PUMP SHALL BE ALTERNATED ON SUCCESSIVE

─ WALL MOUNTED

(2) THE WWHP SHALL BE ENERGIZED TO MAINTAIN THE HEATING WATER SET POINT (INITIALLY SET AT 110 DEGREES F)

1. WHEN THE SWITCH, S, IS SET TO THE ON POSITION, THE FANS SHALL RUN.


DESTRATIFICATION CEILING FAN CONTROL

2. APARATUS BAY CEILING FANS SHALL BE INTERLOCKED TO OPERATE

DESTRATIFICATION FAN (TYP.)

(REFER TO FLOOR PLANS FOR QUANTITY)-

VIA (1) WALL MOUNTED SWITCH.

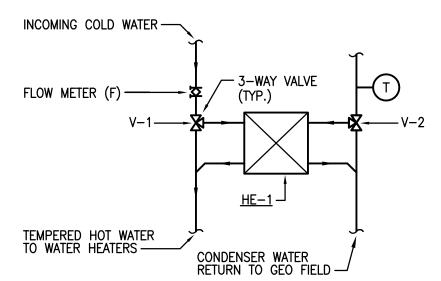

THE HEAT EXCHANGER SHALL BE ENERGIZED AND VALVES V-1 AND V-2 (SERVING CONDENSER WATER RETURN AND INCOMING COLD WATER) SHALL MODULATE TO SEND FLOW THROUGHT THE HEAT EXCHANGER UPON SATISFYING THE FOLLOWING CONDITIONS: 1) THE CONDENSER RETURN WATER REACHES MINIMUM SETPOINT TEMPERATURE

WHEN BOTH CONDITIONS ARE NO LONGER SATISFIED, VALVES V-1 AND V-2 SHALL

HEAT EXCHANGER CONTROL (HE-1)

2) THERE IS A DEMAND FOR HOT WATER AS SENSED BY FLOW METER, F

ENERGY

MANAGEMENT

SYSTEM

CONDENSER WATER SYSTEM CONTROL

MANAGEMENT SYSTEM (EMS). THE CONDENSER WATER LOOP SHALL BE IN THE

OPERATE CONTINUOUSLY. THE SPEED OF THE PUMP SHALL BE CONTROLLED BY THE VARIABLE FREQUENCY DRIVE (VFD), TO PROVIDE THE REQUIRED SYSTEM

SENSOR. PS-1 OR PS-2, THE STANDBY PUMP SHALL BE ENERGIZED. THE LEAD

MODULATE TO BYPASS HEAT EXCHANGER.

(1) OCCUPIED-UNOCCUPIED CONTROL SHALL BE DETERMINED BY THE ENERGY

(2) WHEN IN THE OCCUPIED MODE, THE LEAD CONDENSER WATER PUMP SHALL

PRESSURE, AS SENSED BY DISCHARGE PIPE PRESSURE SENSOR, PS-3.

(3) IF THE LEAD PUMP FAILS TO OPERATE, AS SENSED BY DIFFERENTIAL PRESSURE

OCCUPIED MODE 365 DAYS PER YEAR FOR 24 HOURS PER DAY.

PUMP SHALL BE ALTERNATED ON A MONTHLY BASIS.

(75° ADJ.) AS SENSED BY THERMOMETER, T.

CHLENGER/PIT2 R A S S O C I A T B S, I N C. Consulting Engineers 15 West Aylesbury Road, Timonium, MD 21093 Phone 410.561.1337 Fax 410.561.1446 7 Old Farm Lane Shrewsbury, PA 17361 Phone 717.227.2320 Fax 717.227.9916 4 North Main Street Selbyville, DE 19975 Phone 302.436.2733 Fax 302.436.5211 www.spaengineers.com © Copyright 2008

No. Description

85% SUBMISSION

95% SUBMISSION

100% SUBMISSION

ISSUED FOR PERMIT

CLIENT BID REVIEW SET

CLIENT REVIEW SET

BID SET

Checked:

|Issued:

Approved: SPA

Date App

06/04/10

06/17/10 07/16/10 I

07/30/10

08/27/10

09/15/10

03/17/11

TB/SPA

These drawings are the property of the Architect. Bignell Watkins Hassel

upon copyright laws. Violators will be subject to prosecution by fullest

be notified of any variation from the dimensions and conditions shown by

xtent of the law. Written dimensions on these drawings shall have

precedence over scale dimensions. Contractors shall verify and be

SPA

03/17/11

(410) 224-2727

M

Proj. No.: 07069.01

Sheet Contents: ATC

DIAGRAMS

Scale: AS SHOWN

Dwg.